


Top View

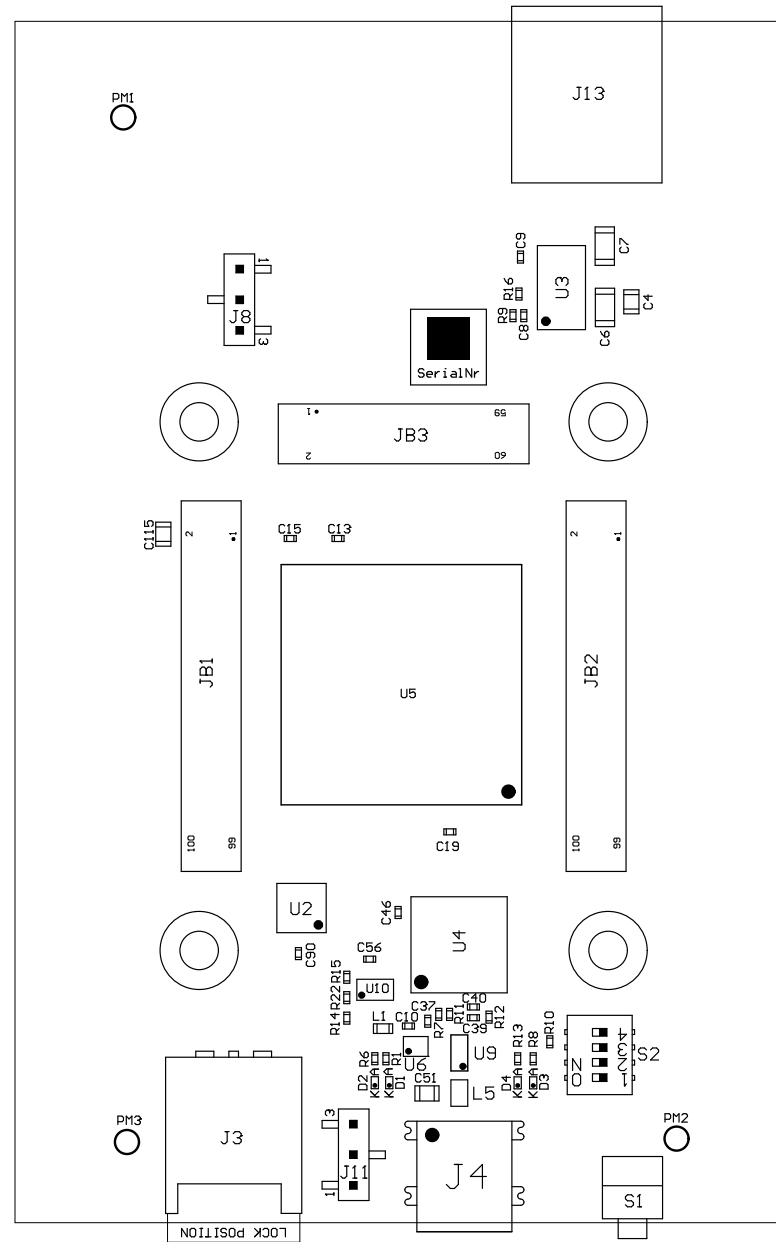

VG96 connectors have to be mounted
 Jumpers have to be installed to:
 J8 pin 1-2
 J11 pin 2-3

Bottom View

