



TE0808 Test Board

Revision v.35

Exported on 2022-02-17

Online version of this document:

<https://wiki.trenz-electronic.de/display/PD/TE0808+Test+Board>

1 Table of Contents

1	Table of Contents	2
2	Table of Figures	4
3	Table of Tables	5
4	Overview	7
4.1	Key Features	7
4.2	Revision History	7
4.3	Release Notes and Know Issues	10
4.4	Requirements	10
4.4.1	Software	10
4.4.2	Hardware	10
4.5	Content	14
4.5.1	Design Sources	14
4.5.2	Additional Sources	15
4.5.3	Prebuilt	15
4.5.4	Download	16
5	Design Flow	17
6	Launch	19
6.1	Programming	19
6.1.1	Get prebuilt boot binaries	19
6.1.2	QSPI-Boot mode	19
6.1.3	SD-Boot mode	19
6.1.4	JTAG	19
6.2	Usage	19
7	System Design - Vivado	21
7.1	Block Design	21
7.1.1	PS Interfaces	21
7.2	Constrains	22
7.2.1	Basic module constrains	22
7.2.2	Design specific constrain	22
8	Software Design - Vitis	23
8.1	Application	23
8.1.1	zynqmp_fsbl	23
8.1.2	zynqmp_fsbl_flash	23
8.1.3	hello_te0808	23
9	Additional Software	24
10	Appx. A: Change History and Legal Notices	25
10.1	Document Change History	25
10.2	Legal Notices	26
10.3	Data Privacy	26
10.4	Document Warranty	26

10.5	Limitation of Liability	26
10.6	Copyright Notice	27
10.7	Technology Licenses.....	27
10.8	Environmental Protection	27
10.9	REACH, RoHS and WEEE	27

2 Table of Figures

Figure 1: Block Design21

3 Table of Tables

Table 1: Design Revision History 7

Table 2: Known Issues..... 10

Table 3: Software 10

Table 4: Hardware Modules..... 10

Table 5: Hardware Carrier..... 14

Table 6: Additional Hardware..... 14

Table 7: Design sources 14

Table 8: Additional design sources 15

Table 9: Prebuilt files (only on ZIP with prebuilt content) 15

Table 10: PS Interfaces..... 21

Table 11: Document change history. 25

4 Overview

Design Example with minimum PS Setup (DDR, QSPI, UART0) only for custom boards or easier debug via Vitis. Refer to <http://trenz.org/te0808-info> for the current online version of this manual and other available documentation.

4.1 Key Features

- Vitis/Vivado 2020.2
- QSPI
- Custom Carrier (minimum PS Design with available module components only)
- Modified FSBL (some additional outputs only)
- Special FSBL for QSPI Programming

4.2 Revision History

Date	Vivado	Project Built	Authors	Description
2021-05-12	2020.2	TE0808-test_board-vivado_2020.2-build_5_20210512133121.zip TE0808-test_board_noprebuilt-vivado_2020.2-build_5_20210512133137.zip	John Hartfiel	<ul style="list-style-type: none"> • update board files
2021-02-05	2020.2	TE0808-test_board-vivado_2020.2-build_0_20210204141911.zip TE0808-test_board_noprebuilt-vivado_2020.2-build_1_20210204142855.zip	John Hartfiel	<ul style="list-style-type: none"> • 2020.2 update
2020-09-29	2019.2	TE0808-test_board_noprebuilt-vivado_2019.2-build_15_20200929070740.zip TE0808-test_board-vivado_2019.2-build_15_20200929070725	John Hartfiel	<ul style="list-style-type: none"> • bugfix 8GB board parts
2020-09-22	2019.2	TE0808-test_board_noprebuilt-vivado_2019.2-build_14_20200922073159.zip TE0808-test_board-	John Hartfiel	<ul style="list-style-type: none"> • new assembly variants

Date	Vivado	Project Built	Authors	Description
		vivado_2019.2-build_14_20200922073144.zip		
2020-03-25	2019.2	TE0808-test_board_noprebuilt-vivado_2019.2-build_8_20200325083246.zip TE0808-test_board-vivado_2019.2-build_8_20200325083204.zip	John Hartfiel	<ul style="list-style-type: none"> script update
2020-01-22	2019.2	TE0808-test_board_noprebuilt-vivado_2019.2-build_3_20200122142231.zip TE0808-test_board-vivado_2019.2-build_3_20200122142208.zip	John Hartfiel	<ul style="list-style-type: none"> 2019.2 update Vitis support
2019-08-09	2018.3	TE0808-test_board_noprebuilt-vivado_2018.3-build_07_20190809131546.zip TE0808-test_board-vivado_2018.3-build_07_20190809131522.zip	John Hartfiel	<ul style="list-style-type: none"> new assembly variants
2019-05-06	2018.3	TE0808-test_board_noprebuilt-vivado_2018.3-build_05_20190507124141.zip TE0808-test_board-vivado_2018.3-build_05_20190507124130.zip	John Hartfiel	<ul style="list-style-type: none"> custom FSBL
2018-07-11	2018.2	TE0808-test_board_noprebuilt-vivado_2018.2-build_02_20180711143743.zip TE0808-test_board-vivado_2018.2-build_02_20180711143702.zip	John Hartfiel	<ul style="list-style-type: none"> additional notes for FSBL generated with Win SDK changed *.bif
2018-03-29	2017.4	TE0808-test_board-vivado_2017.4-build_07_20180329151341.zip TE0808-test_board_noprebuilt-vivado_2017.4-build_07_20180329151355.zip	John Hartfiel	<ul style="list-style-type: none"> new assembly variant

Date	Vivado	Project Built	Authors	Description
2018-01-16	2017.4	TE0808-test_board-vivado_2017.4-build_04_20180116144644.zip TE0808-test_board_noprebuilt-vivado_2017.4-build_04_20180116144657.zip	John Hartfiel	<ul style="list-style-type: none"> Update Board Part for TEBF0808 <ul style="list-style-type: none"> no changes for test board design and minimal board parts
2018-01-15	2017.4	TE0808-test_board-vivado_2017.4-build_03_20180115084954.zip TE0808-test_board_noprebuilt-vivado_2017.4-build_03_20180115085020.zip	John Hartfiel	<ul style="list-style-type: none"> rework Board Part Files
2017-12-20	2017.2	TE0808-test_board-vivado_2017.2-build_07_20171220192501.zip TE0808-test_board_noprebuilt-vivado_2017.2-build_07_20171220192448.zip	John Hartfiel	<ul style="list-style-type: none"> Update Board Part Files
2017-11-22	2017.2	TE0808-test_board-vivado_2017.2-build_05_20171122080211.zip TE0808-test_board_noprebuilt-vivado_2017.2-build_05_20171122080228.zip	John Hartfiel	<ul style="list-style-type: none"> Update Board Part CSV File Regenerate design
2017-11-16	2017.2	TE0808-test_board-vivado_2017.2-build_05_20171116151545.zip TE0808-test_board_noprebuilt-vivado_2017.2-build_05_20171116151600.zip	John Hartfiel	<ul style="list-style-type: none"> Update Board Part CSV File with new Flash assembly variants
2017-11-13	2017.2	TE0808-test_board-vivado_2017.2-build_05_20171113140954.zip TE0808-test_board_noprebuilt-vivado_2017.2-build_05_20171113141908.zip	John Hartfiel	<ul style="list-style-type: none"> initial release

Table 1: Design Revision History

4.3 Release Notes and Know Issues

Issues	Description	Workaround	To be fixed version
No known issues	---	---	---

Table 2: Known Issues

4.4 Requirements

4.4.1 Software

Software	Version	Note
Vitis	2020.2	needed, Vivado is included into Vitis installation

Table 3: Software

4.4.2 Hardware

Basic description of TE Board Part Files is available on [TE Board Part Files](https://wiki.trenz-electronic.de/display/PD/TE+Board+Part+Files).¹
 Complete List is available on "<project folder>\board_files*_board_files.csv"

Design supports following modules:

Module Model	Board Part Short Name	PCB Revision Support	DDR	QSPI Flash	EMC	Others	Notes
TE0808-ES1	es1_2gb	REV03 REV02	2G B	64MB	NA	NA	Not longer supported by vivado
TE0808-ES2	es2_2gb	REV04 REV03	2G B	64MB	NA	NA	Not longer supported by vivado
TE0808-2ES2	2es2_2gb	REV04 REV03	2G B	64MB	NA	NA	Not longer supported

¹ <https://wiki.trenz-electronic.de/display/PD/TE+Board+Part+Files>

Module Model	Board Part Short Name	PCB Revision Support	DDR	QSPI Flash	EMMC	Others	Notes
							by vivado
TE0808-04-09EG-1EA	9eg_1e_2gb	REV04	2GB	64MB	NA	NA	NA
TE0808-04-09EG-1EB	9eg_1e_4gb	REV04	4GB	64MB	NA	NA	NA
TE0808-04-09EG-1ED	9eg_1e_4gb	REV04	4GB	64MB	NA	1 mm connectors	NA
TE0808-04-09EG-2IB	9eg_2i_4gb	REV04	4GB	64MB	NA	NA	NA
TE0808-04-15EG-1EB	15eg_1e_4gb	REV04	4GB	64MB	NA	NA	NA
TE0808-04-09EG-1EE	9eg_1e_4gb	REV04	4GB	128MB	NA	NA	NA
TE0808-04-09EG-1EL	9eg_1e_4gb	REV04	4GB	128MB	NA	1 mm connectors	NA
TE0808-04-09EG-2IE	9eg_2i_4gb	REV04	4GB	128MB	NA	NA	NA
TE0808-04-15EG-1EE	15eg_1e_4gb	REV04	4GB	128MB	NA	NA	NA
TE0808-04-06EG-1EE	6eg_1e_4gb	REV04	4GB	128MB	NA	NA	NA

Module Model	Board Part Short Name	PCB Revision Support	DDR	QSPI Flash	EMMC	Others	Notes
TE0808-04-06EG-1E3	6eg_1e_4gb	REV04	4GB	128MB	NA	1 mm connectors	NA
TE0808-04-6GI21-L	6eg_2i_4gb	REV04	4GB	128MB	NA	1 mm connectors	NA
TE0808-04-6BI21-A	6eg_1i_4gb	REV04	4GB	128MB	NA	NA	NA
TE0808-04-9GI21-A	9eg_2i_4gb	REV04	4GB	128MB	NA	NA	NA
TE0808-04-9BE21-A	9eg_1e_4gb	REV04	4GB	128MB	NA	NA	NA
TE0808-04-6BE21-L	6eg_1e_4gb	REV04	4GB	128MB	NA	1 mm connectors	NA
TE0808-04-6BE21-A	6eg_1e_4gb	REV04	4GB	128MB	NA	NA	NA
TE0808-04-9BE21-L	9eg_1e_4gb	REV04	4GB	128MB	NA	1 mm connectors	NA
TE0808-04-BBE21-A	15eg_1e_4gb	REV04	4GB	128MB	NA	NA	NA
TE0808-04-6BI21-X	6eg_1i_4gb	REV04	4GB	128MB	NA	NA	U41 replaced with schottky diodes

Module Model	Board Part Short Name	PCB Revision Support	DDR	QSPI Flash	EMMC	Others	Notes
TE0808-05-6BE21-L	6eg_1e_4gb	REV05	4GB	128MB	NA	1 mm connectors	NA
TE0808-05-6BE21-A	6eg_1e_4gb	REV05	4GB	128MB	NA	NA	NA
TE0808-05-6BI21-D	6eg_1i_4gb	REV05	4GB	128MB	NA	1 mm connectors	SoC without encryption
TE0808-05-6BI21-X	6eg_1i_4gb	REV05	4GB	128MB	NA	NA	U41 replaced with schottky diodes
TE0808-05-6BI41-X	6eg_1i_8gb	REV05	8GB	128MB	NA	NA	U41 replaced with schottky diodes
TE0808-05-9BE21-A	9eg_1e_4gb	REV05	4GB	128MB	NA	NA	NA
TE0808-05-9BE21-L	9eg_1e_4gb	REV05	4GB	128MB	NA	1 mm connectors	NA
TE0808-05-9BI41-X	9eg_1i_8gb	REV05	8GB	128MB	NA	NA	U41 replaced with schottky diodes
TE0808-05-9GI21-A	9eg_2i_4gb	REV05	4GB	128MB	NA	NA	NA
TE0808-05-9GI21-C	9eg_2i_4gb	REV05	4GB	128MB	NA	NA	SoC without encryption

Module Model	Board Part Short Name	PCB Revision Support	DDR	QSPI Flash	EM MC	Others	Notes
TE0808-05-BBE21-A	15eg_1e_4gb	REV05	4GB	128MB	NA	NA	NA
TE0808-05-BBE21-L	15eg_1e_4gb	REV05	4GB	128MB	NA	1 mm connectors	NA

Table 4: Hardware Modules

Note: Design contains also Board Part Files for TE0803+TEBF0808 configuration, this board part files are not used for this reference design.

Design supports following carriers:

Carrier Model	Notes
Custom PCB	use simple Board Part files, if MIO connected is different to TEBF0808
TEBF0808	Used as reference carrier.
TEBT0808-01	Change UART0 to UART1 (MIO68...69) and regenerate design

Table 5: Hardware Carrier

Additional HW Requirements:

Additional Hardware	Notes
---	---

Table 6: Additional Hardware

4.5 Content

For general structure and usage of the reference design, see [Project Delivery - Xilinx devices](https://wiki.trenz-electronic.de/display/PD/Project+Delivery+-+Xilinx+devices)²

4.5.1 Design Sources

Type	Location	Notes
Vivado	<project folder>\block_design <project	Vivado Project will be generated by TE Scripts

² <https://wiki.trenz-electronic.de/display/PD/Project+Delivery+-+Xilinx+devices>

Type	Location	Notes
	folder>\constraints <project folder>\ip_lib <project folder>\board_files	
Vitis	<project folder>\sw_lib	Additional Software Template for Vitis and apps_list.csv with settings automatically for Vitis app generation

Table 7: Design sources

4.5.2 Additional Sources

Type	Location	Notes
---	---	---

Table 8: Additional design sources

4.5.3 Prebuilt

File	File-Extension	Description
BIF-File	*.bif	File with description to generate Bin-File
BIN-File	*.bin	Flash Configuration File with Boot-Image (Zynq-FPGAs)
BIT-File	*.bit	FPGA (PL Part) Configuration File
Diverse Reports	---	Report files in different formats
Hardware-Platform-Description-File	*.xsa	Exported Vivado hardware description file for Vitis and PetaLinux
LabTools Project-File	*.lpr	Vivado Labtools Project File
Software-Application-File	*.elf	Software Application for Zynq or MicroBlaze Processor Systems

Table 9: Prebuilt files (only on ZIP with prebuilt content)

4.5.4 Download

Reference Design is only usable with the specified Vivado/Vitis/PetaLinux version. Do never use different Versions of Xilinx Software for the same Project.

Reference Design is available on:

- [TE0808 "Test Board" Reference Design](https://shop.trenz-electronic.de/Download/?path=Trenz_Electronic/Modules_and_Module_Carriers/5.2x7.6/TE0808/Reference_Design/2020.2/test_board)³

³ https://shop.trenz-electronic.de/Download/?path=Trenz_Electronic/Modules_and_Module_Carriers/5.2x7.6/TE0808/Reference_Design/2020.2/test_board

5 Design Flow

! Reference Design is available with and without prebuilt files. It's recommended to use TE prebuilt files for first launch.

Trenz Electronic provides a tcl based built environment based on Xilinx Design Flow.

See also:

- [Xilinx Development Tools](#)⁴
- [Vivado Projects - TE Reference Design](#)⁵
- [Project Delivery](#).⁶

The Trenz Electronic FPGA Reference Designs are TCL-script based project. Command files for execution will be generated with "_create_win_setup.cmd" on Windows OS and "_create_linux_setup.sh" on Linux OS.

TE Scripts are only needed to generate the vivado project, all other additional steps are optional and can also be executed by Xilinx Vivado/Vitis GUI. For currently Scripts limitations on Win and Linux OS see: [Project Delivery Currently limitations of functionality](#)⁷

! **Caution!** Win OS has a 260 character limit for path lengths which can affect the Vivado tools. To avoid this issue, use Virtual Drive or the shortest possible names and directory locations for the reference design (for example "x:\<project folder>")

1. Run _create_win_setup.cmd/_create_linux_setup.sh and follow instructions on shell:

_create_win_setup.cmd/_create_linux_setup.sh

```
-----Set design paths-----
-- Run Design with: _create_win_setup
-- Use Design Path: <absolute project path>
-----
-----TE Reference Design-----
-----
-- (0)  Module selection guide, project creation...prebuilt export...
-- (1)  Create minimum setup of CMD-Files and exit Batch
-- (2)  Create maximum setup of CMD-Files and exit Batch
-- (3)  (internal only) Dev
-- (4)  (internal only) Prod
-- (c)  Go to CMD-File Generation (Manual setup)
-- (d)  Go to Documentation (Web Documentation)
-- (g)  Install Board Files from Xilinx Board Store (beta)
-- (a)  Start design with unsupported Vivado Version (beta)
-- (x)  Exit Batch (nothing is done!)
-----
Select (ex.: '0' for module selection guide):
```

2. Press 0 and enter to start "Module Selection Guide"
3. Create project and follow instructions of the product selection guide, settings file will be configured automatically during this process.


⁴ <https://wiki.trenz-electronic.de/display/PD/Xilinx+Development+Tools#XilinxDevelopmentTools-XilinxSoftware-BasicUserGuides>

⁵ <https://wiki.trenz-electronic.de/display/PD/Vivado+Projects+-+TE+Reference+Design>

⁶ <https://wiki.trenz-electronic.de/display/PD/Project+Delivery+-+Xilinx+devices>

⁷ <https://wiki.trenz-electronic.de/display/PD/Project+Delivery+-+Xilinx+devices#ProjectDeliveryXilinxdevices-Currentlylimitationsoffunctionality>


- optional for manual changes: Select correct device and Xilinx install path on "design_basic_settings.cmd" and create Vivado project with "vivado_create_project_gui mode.cmd"

 Note: Select correct one, see also [Vivado Board Part Flow](#)⁸
Important: Use Board Part Files, which **did not** end with *_tebf0808

4. Create hardware description file (.xsa file) and export to prebuilt folder

run on Vivado TCL (Script generates design and export files into "\prebuilt\hardware\")


```
\prebuilt\hardware\")">  
TE::hw_build_design -export_prebuilt
```

 Using Vivado GUI is the same, except file export to prebuilt folder.

5. Generate Programming Files with Vitis

run on Vivado TCL (Script generates applications and bootable files, which are defined in "test_board\sw_lib\apps_list.csv")

```
TE::sw_run_vitis -all  
TE::sw_run_vitis (optional; Start Vitis from Vivado GUI or start with TE  
Scripts on Vivado TCL)
```


 TCL scripts generate also platform project, this must be done manually in case GUI is used. See [Vitis](#)⁹

⁸ <https://wiki.trenz-electronic.de/display/PD/Vivado+Board+Part+Flow>

⁹ <https://wiki.trenz-electronic.de/display/PD/Vitis>

6 Launch


6.1 Programming

 Check Module and Carrier TRMs for proper HW configuration before you try any design.

Xilinx documentation for programming and debugging: [Vivado/Vitis/SDSoC-Xilinx Software Programming and Debugging](#)¹⁰

6.1.1 Get prebuilt boot binaries


1. Run `_create_win_setup.cmd/_create_linux_setup.sh` and follow instructions on shell
2. Press 0 and enter to start "Module Selection Guide"
 - a. Select assembly version
 - b. Validate selection
 - c. Select create and open delivery binary folder

 Note: Folder "<project folder>_binaries_<Article Name>" with subfolder "boot_<app name>" for different applications will be generated

6.1.2 QSPI-Boot mode

1. Connect JTAG and power on carrier with module
2. Open Vivado Project with "vivado_open_existing_project_guimode.cmd" or if not created, create with "vivado_create_project_guimode.cmd"

```
TE::pr_program_flash -swapp hello_te0808
```

 To program with Vitis/Vivado GUI, use special FSBL (fsbl_flash) on setup

6.1.3 SD-Boot mode

This does not work, because SD controller is not selected on PS.

6.1.4 JTAG


Load configuration and Application with Vitis Debugger into device

6.2 Usage

QSPI Boot:

¹⁰ <https://wiki.trenz-electronic.de/display/PD/Xilinx+Development+Tools#XilinxDevelopmentTools-XilinxSoftwareProgrammingandDebugging>

1. Prepare HW like described on section [Programming](#)(see page 19)
2. Connect UART USB (most cases same as JTAG)
3. Select QSPI as Boot Mode

 Note: See TRM of the Carrier, which is used.

4. Power On PCB

boot process

1. ZynqMP Boot ROM FSBL from QSPI into OCM,
2. FSBL init the PS, programs the PL using the bitstream and loads PMU, ATF and U-boot from QSPI into DDR

7 System Design - Vivado

7.1 Block Design

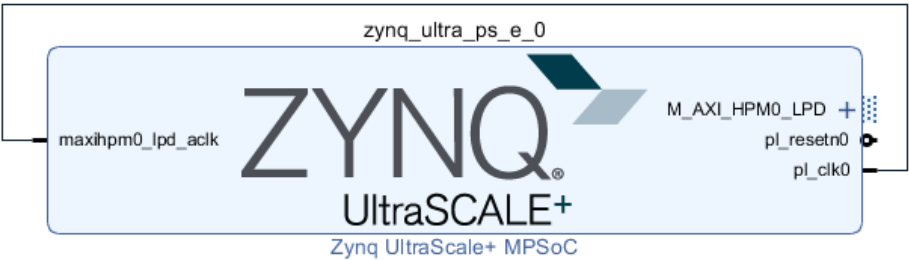


Figure 1: Block Design

7.1.1 PS Interfaces

Activated interfaces:

Type	Note
DDR	
QSPI	MIO
UART0	MIO, please select other one, if you have connected UART to second controller or other MIO
SWDT0..1	
TTC0..3	

Table 10: PS Interfaces

7.2 Constrains

7.2.1 Basic module constrains

_i_bitgen.xdc

```
set_property BITSTREAM.GENERAL.COMPRESS TRUE [current_design]  
set_property BITSTREAM.CONFIG.UNUSEDPIN PULLNONE [current_design]
```

7.2.2 Design specific constrain

Not needed.

8 Software Design - Vitis

For Vitis project creation, follow instructions from:

[Vitis¹¹](https://wiki.trenz-electronic.de/display/PD/Vitis)

8.1 Application

Template location: "<project folder>\sw_lib\sw_apps\"

8.1.1 zynqmp_fsbl

TE modified 2020.2 FSBL

General:

- Modified Files: xfsbl_main.c, xfsbl_hooks.h/.c, xfsbl_board.h/.c (search for 'TE Mod' on source code)
- Add Files: te_xfsbl_hooks.h/.c (for hooks and board)
- General Changes:
 - Display FSBL Banner and Device Name

8.1.2 zynqmp_fsbl_flash

TE modified 2020.2 FSBL

General:

- Modified Files: xfsbl_initialisation.c, xfsbl_hw.h, xfsbl_handoff.c, xfsbl_main.c
- General Changes:
 - Display FSBL Banner
 - Set FSBL Boot Mode to JTAG
 - Disable Memory initialisation

8.1.3 hello_te0808

Hello TE0808 is a Xilinx Hello World example as endless loop instead of one console output.

¹¹ <https://wiki.trenz-electronic.de/display/PD/Vitis>


9 Additional Software

No additional software is needed.

10 Appx. A: Change History and Legal Notices

10.1 Document Change History

To get content of older revision go to "Change History" of this page and select older document revision number.

Date	Document Revision	Authors	Description
 2021-05-25	v.35 (see page 6)	Manuela Strücker ¹²	<ul style="list-style-type: none"> Document Style update
2021-05-12	v.34	John Hartfiel	<ul style="list-style-type: none"> update board files
2021-02-05	v.33	John Hartfiel	<ul style="list-style-type: none"> Release 2020.2 Document Style update
2021-02-05	v.31	John Hartfiel	<ul style="list-style-type: none"> new assembly variants
2020-03-25	v.28	John Hartfiel	<ul style="list-style-type: none"> script update
2020-01-27	v.27	John Hartfiel	<ul style="list-style-type: none"> documentation update
2020-01-22	v.26	John Hartfiel	<ul style="list-style-type: none"> new assembly variants Release 2019.2
2019-08-09	v.24	John Hartfiel	<ul style="list-style-type: none"> new assembly variants small document style update
2019-05-07	v.22	John Hartfiel	<ul style="list-style-type: none"> Release 2018.3
2018-07-11	v.21	John Hartfiel	<ul style="list-style-type: none"> Release 2018.2
2018-03-29	v.20	John Hartfiel	<ul style="list-style-type: none"> new assembly variant
2018-02-08	v.19	John Hartfiel	<ul style="list-style-type: none"> Release 2017.4

¹² <https://wiki.trenz-electronic.de/display/~m.struecker>

Date	Document Revision	Authors	Description
2017-12-20	v.14	John Hartfiel	<ul style="list-style-type: none"> Design Update typo correction on documentation
2017-11-22	v.10	John Hartfiel	<ul style="list-style-type: none"> Update assembly versions with new Flash size Update HW Table Name Update Design
2017-11-14	v.6	John Hartfiel	<ul style="list-style-type: none"> Release 2017.2
--	all	John Hartfiel ¹³ , Manuela Strücker ¹⁴	--

Table 11: Document change history.

10.2 Legal Notices

10.3 Data Privacy

Please also note our data protection declaration at <https://www.trenz-electronic.de/en/Data-protection-Privacy>

10.4 Document Warranty

The material contained in this document is provided “as is” and is subject to being changed at any time without notice. Trenz Electronic does not warrant the accuracy and completeness of the materials in this document. Further, to the maximum extent permitted by applicable law, Trenz Electronic disclaims all warranties, either express or implied, with regard to this document and any information contained herein, including but not limited to the implied warranties of merchantability, fitness for a particular purpose or non infringement of intellectual property. Trenz Electronic shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein.

10.5 Limitation of Liability

In no event will Trenz Electronic, its suppliers, or other third parties mentioned in this document be liable for any damages whatsoever (including, without limitation, those resulting from lost profits, lost data or business interruption) arising out of the use, inability to use, or the results of use of this document, any documents linked to this document, or the materials or information contained at any or all such documents. If your use of the materials or information from this document results in the need for servicing, repair or correction of equipment or data, you assume all costs thereof.

¹³ <https://wiki.trenz-electronic.de/display/~j.hartfiel>

¹⁴ <https://wiki.trenz-electronic.de/display/~m.struecker>

10.6 Copyright Notice

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Trenz Electronic.

10.7 Technology Licenses

The hardware / firmware / software described in this document are furnished under a license and may be used / modified / copied only in accordance with the terms of such license.

10.8 Environmental Protection

To confront directly with the responsibility toward the environment, the global community and eventually also oneself. Such a resolution should be integral part not only of everybody's life. Also enterprises shall be conscious of their social responsibility and contribute to the preservation of our common living space. That is why Trenz Electronic invests in the protection of our Environment.

10.9 REACH, RoHS and WEEE

REACH

Trenz Electronic is a manufacturer and a distributor of electronic products. It is therefore a so called downstream user in the sense of [REACH](#)¹⁵. The products we supply to you are solely non-chemical products (goods). Moreover and under normal and reasonably foreseeable circumstances of application, the goods supplied to you shall not release any substance. For that, Trenz Electronic is obliged to neither register nor to provide safety data sheet. According to present knowledge and to best of our knowledge, no [SVHC \(Substances of Very High Concern\) on the Candidate List](#)¹⁶ are contained in our products. Furthermore, we will immediately and unsolicited inform our customers in compliance with REACH - Article 33 if any substance present in our goods (above a concentration of 0,1 % weight by weight) will be classified as SVHC by the [European Chemicals Agency \(ECHA\)](#)¹⁷.

RoHS

Trenz Electronic GmbH herewith declares that all its products are developed, manufactured and distributed RoHS compliant.

WEEE

Information for users within the European Union in accordance with Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE).

Users of electrical and electronic equipment in private households are required not to dispose of waste electrical and electronic equipment as unsorted municipal waste and to collect such waste electrical and electronic equipment separately. By the 13 August 2005, Member States shall have ensured that systems are set up allowing final holders and distributors to return waste electrical and electronic equipment at least free of charge. Member States shall ensure the availability and accessibility of the necessary collection facilities. Separate collection is the precondition to ensure specific treatment and recycling of waste electrical and electronic equipment and is necessary to achieve the chosen level of protection of human health and the environment in the European Union. Consumers have to actively contribute to the success of such collection

¹⁵ <http://guidance.echa.europa.eu/>

¹⁶ <https://echa.europa.eu/candidate-list-table>

¹⁷ <http://www.echa.europa.eu/>

and the return of waste electrical and electronic equipment. Presence of hazardous substances in electrical and electronic equipment results in potential effects on the environment and human health. The symbol consisting of the crossed-out wheeled bin indicates separate collection for waste electrical and electronic equipment.

Trenz Electronic is registered under WEEE-Reg.-Nr. DE97922676.

 2019-06-07